

INSTALLATION & OPERATING INSTRUCTIONS FOR



FIREPLACE GAS LOGS

Model Numbers: GO18TIR and GO24TIR

Applicable for use with all styles and sizes of Infrared Burner Natural Gas Log Sets.

Note: Installer should leave these instructions with the consumer to retain for future reference.

**INFRARED
BURNER**



**INFRARED
BURNER**

NOTICE

Do not return to retailer if a log is broken or parts are missing.

Please call our Customer Service Department at **800-229-5647** for replacements.

THANK YOU

Please Read these instructions carefully before you begin to install this gas log set.

FOR YOUR SAFETY

- If you smell gas:
 1. Open windows
 2. Don't touch electrical switches
 3. Extinguish any open flame
 4. Immediately call your gas supplier.
- Do not store or use gasoline or flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not place clothing or other flammable material on or near the appliance.
- Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the same room as the appliance.

LOG PLACEMENT

STEP 1



STEP 2



STEP 3



INFRARED BURNER PARTS LIST

Figure 1

12




Grate & Burner Assembly

13



Manual Shutoff Valve

14

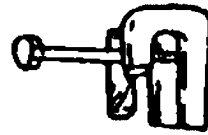

Damper Stop Clamp

15



3/8" Flared Tubing

16



Granules

17



Glowing Embers

18



Pipe Sealant

REF.	DUAL BURNER RADCO	PART NUMBER 18" SET	QTY	PART NUMBER 24" SET	QTY
12	Grate & Burner Assembly	FIH-B-HDIR18NG	1	FIH-B-HDIR24NG	1
13	Manual Shutoff Valve	RMH-120-00700	1	RMH-120-00700	1
14	Damper Stop Clamp	RMH-120-00100	1	RMH-120-00100	1
15	3/8" Flared Tubing	WIP-120-90445	1	WIP-120-90445	1
16	Granules	WIP-130-00013	1	WIP-130-00013	1
17	Glowing Embers	WIP-130-00300	1	WIP-130-00300	1
18	Pipe Sealant	RCOZZ-00008A	1	RCOZZ-00008A	1
13	Instruction Manual	RMH-130-00722	1	RMH-130-00722	1

1. This gas log set is only to be installed and burned in a fully vented fireplace with a fully functional damper and chimney that is free of any obstructions. The fireplace must be constructed of non-combustible materials and approved to burn wood.

WARNING: Do not burn wood or other material in any fireplace fitted with a gas log set.

2. To operate this gas log set, the fireplace damper must be fully opened and locked.
3. The smallest or minimum dimension of the chimney flue must be 8 inches in diameter. Do not use an Energy Efficient Gas Log Set if it is smaller than 8 inches. Do not use an Energy Efficient Gas Log Set if fumes from the burner emerge into the room when the damper is fully open. This indicates that there is not adequate draft for our log set and the gas log set must not be used until fireplace draft is corrected.
4. This appliance must be installed with a Damper Stop Clamp (Part #14). When operating this gas log set, the flue damper must be fully open.

WARNING: Improper use or installation may cause Carbon Monoxide Poisoning. Carbon Monoxide, which is an odorless and colorless gas, is a by-product of combustion. Caution must be taken to insure the fireplace is properly vented when logs are in use. To avoid having potentially dangerous fumes enter the living area, be sure the chimney is drawing properly and has sufficient draft.

5. A fireplace screen must be in place when operating this gas log set. This screen shall have an opening(s) for the introduction of combustion air. If the fireplace has glass doors, operate this gas set with the doors fully opened.
6. The nominal inlet gas pressure for this appliance is 7" water column for natural gas.
7. This gas log appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing at pressures in excess of 1/2 PSIG.

This appliance must also be disconnected from the gas supply system by closing its individual manual shutoff valve during any pressure testing at pressures equal to or less than 1/2 PSIG.

FIREPLACE PREPARATION

- A. Professionally clean chimney and fireplace floor of any combustible material to limit the smell from the system.
- B. Open fireplace damper fully and install Damper Stop Clamp with set screw (Part #14). This clamp is designed to allow any pilot combustion by-products to vent (See Figure 2.) Should the Damper Stop Clamp supplied not fit, a permanent damper stop clamp must be installed that will keep the damper open at a distance of not less than 1 1/2". Damper must be in full open position anytime this unit is in operation.
- C. Prior to connecting the gas log set, make sure that the gas supply to the fireplace is completely shut off.

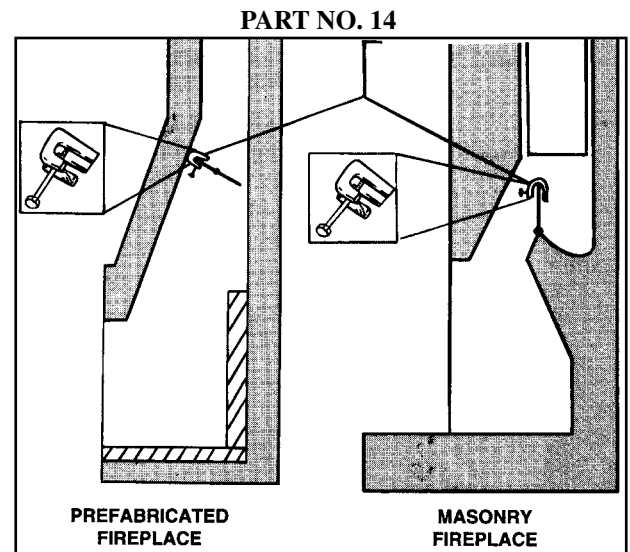


Figure 2. Damper stop clamp

Installation of this Energy Efficient Gas Log Set and provisions for combustion and ventilation air must conform with the National Fuel Gas Code ANSI Z21-84 and applicable local codes.

- D. **Installation to existing gas line in fireplace.** A manual on-off valve should be present within easy reach of the gas log set. If a manual valve is not present, one must be installed prior to the gas log installation.
- E. **Prefabricated fireplace:** Refer to the manufacturer's fireplace instruction manual for specific information regarding the running of a gas line into that particular model. A typical prefab installation involves the insertion of a 1/2" gas pipe through the gas line tube provided by each manufacturer from **outside** the fireplace. The knockout on the inside of the fireplace is removed as the gas pipe is punched through the fireplace.
- F. **Masonry fireplaces:** A 1/2" gas supply line must be provided to the firebox. Most installations require drilling an access hole through the masonry wall. The supply line should be secured and sealed by mortar within the access hole. The supply line should also have an on-off valve either in the wall or inside the fireplace. (See Figure 3B.)

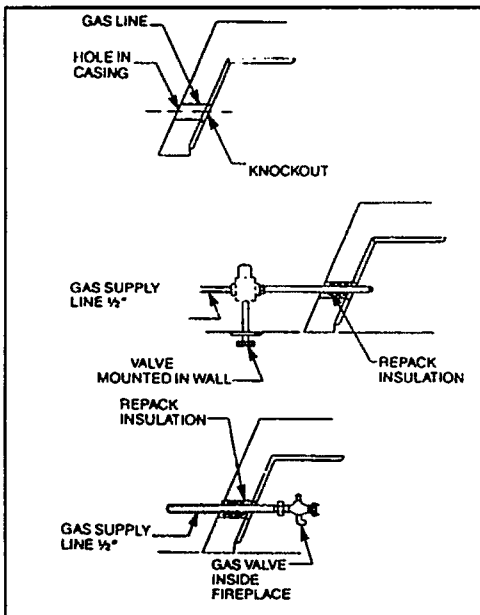


Figure 3A - Gas line installation
Prefabricated fireplace

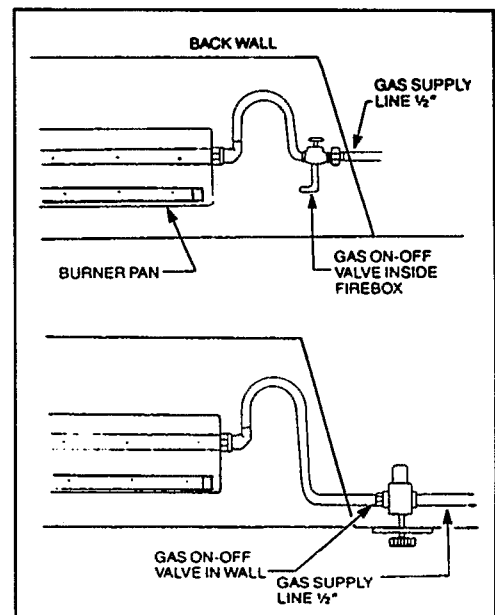


Figure 3B - Gas line installation
Masonry fireplace

GAS LOG INSTALLATION

(See Figure 1 Parts List as a guide to reference part numbers.)

CONNECTING GAS SUPPLY TO BURNER ASSEMBLY

(If a Safety Pilot Kit is to be used, please refer to separate installation instructions.) These instructions refer to Natural Gas applications installed without a Safety Pilot Kit. LP/NG Safety Pilot Kit available at your local dealer.

- A. Place burner pan assembly in the center of the fireplace.
- B. Attach brass 3/8" Flared to 1/2" gas valve (Part #13) to the 1/2" gas supply stub.
- C. Attach 3/8" flared tubing (part #15) to burner pan assembly. Attach opposite end to gas supply line by carefully bending the flared tubing as needed to make the connection. Avoid kinking the flared tubing while bending. If tubing must be cut, use a tube cutter. Flare the cut end of the tube with a flaring tool.
- D. Be certain all connections are tight and use pipe compound on all male threads to seal joints. Test all connections with a soapy water solution with the gas supply turned on. If bubbles appear on any connection, retighten and retest. Once it is determined there are no leaks whatsoever, turn off gas supply and move to next assembly step.

GRANULE AND EMBER PLACEMENT

A. Spread granules (Part #16) over the installed burner pan. Granules should be sloped to the same angle as the burner pan filling the entire pan. (See Figure 4).

NOTE: The top two burners inside the burner pan should be covered, leaving the bottom infrared burner, which is below the grate, exposed.

B. Spread glowing embers (Part #17) evenly over the top of the granules on the burner pan (See Figure 5).

C. There are two methods for spreading glowing embers over the bottom infrared burner:

1. For maximum heat output, only cover the lower portion of the burner as shown in figure 5.
2. For minimal heat output, cover the entire burner surface with the glowing embers.

D. Spread any remaining granules on the fireplace floor either in front of or on the sides of the burner assembly.

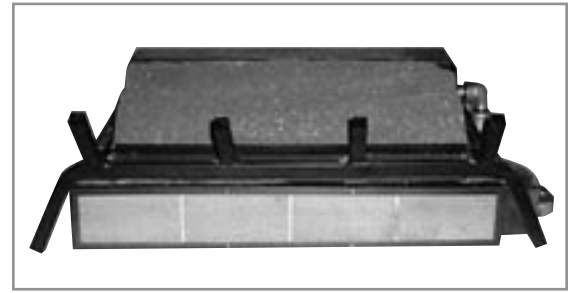


Figure 4- Granule placement

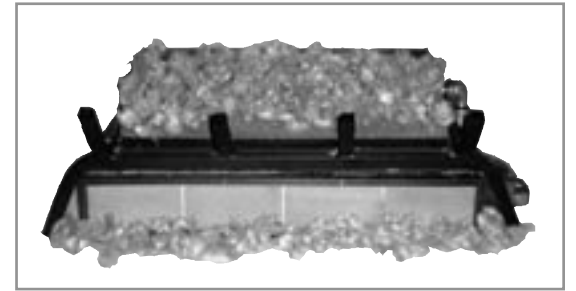


Figure 5 - Glowing Ember placement

LOG PLACEMENT

A. Place long back log on back log ledge (step 1).

B. Place the two front logs on the front part of the grate (step 2).

C. Place top logs on unit, as shown in steps 4 and 5.

LIGHTING YOUR GAS LOG SET

(Manual valve only)

A. Open chimney flue damper to the full open position.

B. Be sure gas supply is shut off.

C. Lay match on top of granules.

Do not hold match in hand (See Figure 5).

D. With match burning, slowly turn on gas.

MAINTENANCE

Very little maintenance is required. The carbon deposit resulting from combustion is natural and adds to the realistic appearance of the set. If carbon becomes excessive it can be lightly brushed or vacuumed away.

TROUBLE SHOOTING

<u>Problem</u>	<u>Cause</u>	<u>Corrective Action</u>
1. No Ignition	valve not on gas line not clear	turn valve on inspect supply lines for tube kinks or obstructions
2. Inadequate Flame	valve partially closed gas line obstruction log arrangement	open valve fully inspect burner for tube kinks or obstructions rearrange logs to desired pattern

LIMITED WARRANTY

Warranty shall apply to the original purchaser at the original installation point only.

All logs are guaranteed for three years against manufacturer's defects.

The burner assembly system is guaranteed for a period of (3) years from the date of purchase and will be replaced for freight costs only.

Pilot, valves and thermocouples are guaranteed for a period of one (1) year under the original manufacturers warranty.

General Warranty: This warranty does not apply in the case of improper installation, neglect, accident, misuse or as a result of modifications of the original product.

All costs for removal and re-installation are the expressed responsibility of the purchaser.

For repair, replacement, or service to defective part(s) please contact our Customer Service Hotline, number below. Thereafter with valid warranty registration and proof of purchase, call the Customer Service Hotline for authorization to ship defective part prepaid and insured in original carton to Sure Heat Manufacturing, 1861 West Oak Parkway, Marietta, GA 30062. Goods returned improperly packaged are the sole responsibility of purchaser.

It is agreed that any repair or replacement is the exclusive remedy from Sure Heat Manufacturing. In no case shall Sure Heat be liable for any consequential damage or breach of this or any other warranty expressed or implied whatsoever. This limitation as to consequential damages shall not apply in states where prohibited.

Purchased From: _____ Date: _____

Size: 18" 21" Model:

Name: _____ Phone: (____) _____

Address: _____

City: _____ State: _____ Zip: _____

***Please photocopy and return within 14 days of purchase to
Sure Heat, 1861 West Oak Parkway, Marietta, GA 30062***

If you have other questions, please contact the Customer Service Hotline — (800) 229-5647

