


## Jenn-Air Side Burner 38" Models

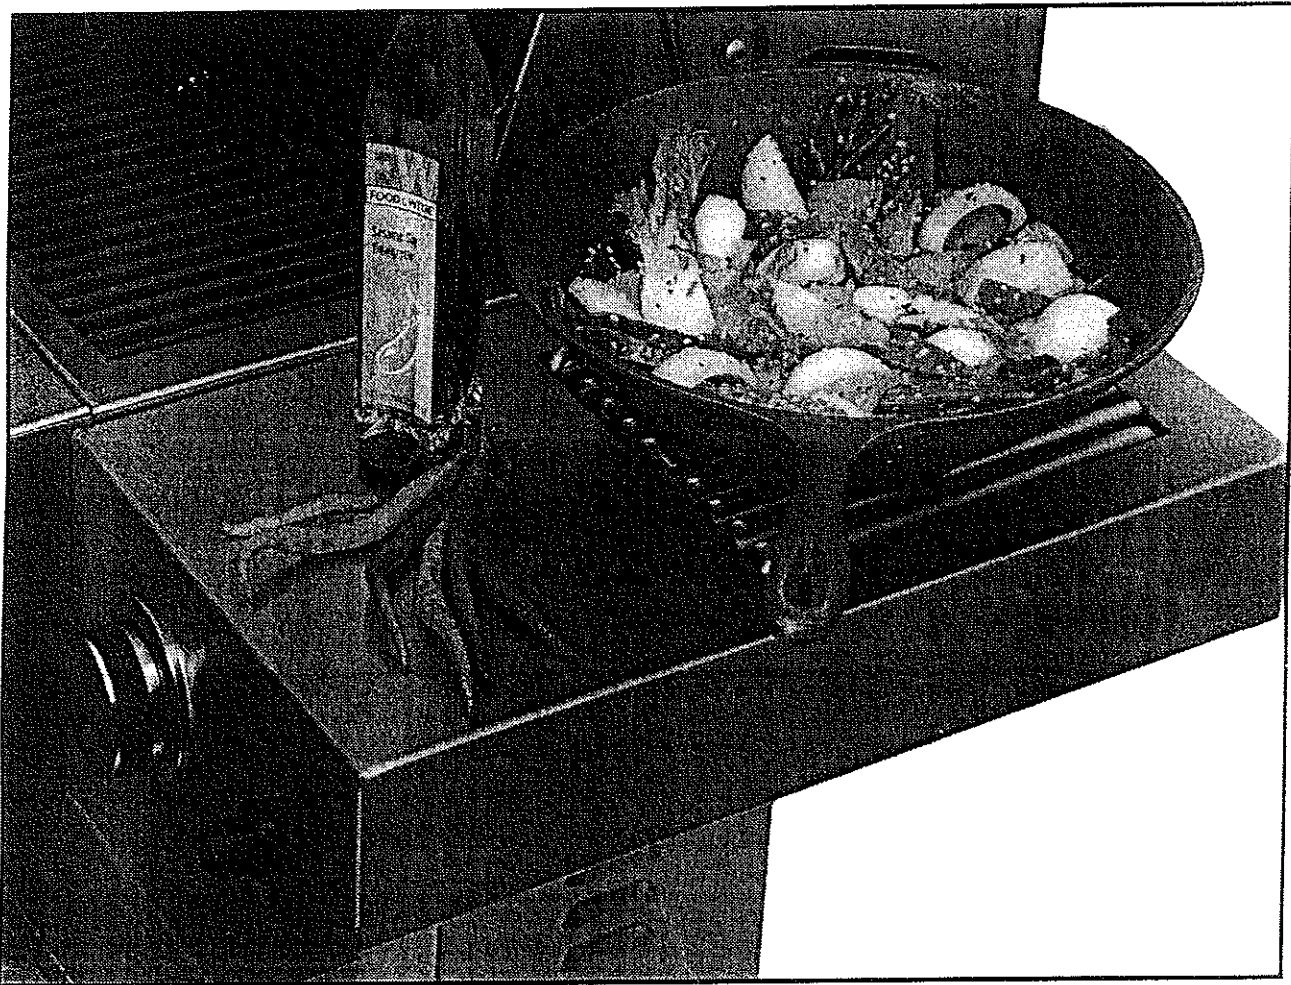

# USE AND CARE MANUAL

FOR OUTDOOR USE ONLY  
MADE IN THE USA

# GENERAL SAFETY INSTRUCTIONS

## IMPORTANT SAFETY INFORMATION

Read this manual carefully before using your grill to reduce the risk of fire, burn hazard or other injury.

- Extreme care should be used because of the high temperatures produced by this appliance. **CHILDREN SHOULD NOT BE LEFT UNATTENDED IN AN AREA WHERE THE GRILL IS BEING OPERATED.**
- This appliance must be kept clear from combustible materials, gasoline or other flammable vapors and liquids. Do not allow flammable materials to come in contact with grate, burner or hot surfaces.
- Do not repair or replace any part of this appliance unless it is specifically recommended in this manual. A qualified service technician should conduct all other service.
- Follow the installation and servicing instructions provided with this product. Have your grill installed by a qualified service technician. Locate the main gas supply valve so that you know how to shut the gas off to your grill. If you smell gas, make sure all gas connections are tight before operation. If you continue to smell gas call a qualified technician.
- When lighting the burners, always pay close attention to what you are doing. Be certain you are pushing the ignitor to light the burners you intend on using.

### WARNING

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flames.
3. Open lid.
4. If odor continues, immediately call your gas supplier.

### CALIFORNIA PROPOSITION 65 -

**WARNING:** The Burning of gas cooking fuels generates some by products which are on the list of substances which are known by the State of California to cause cancer or reproductive harm. California law requires businesses to warn customers of potential exposure to such substances. To minimize exposure to these substances, always operate this unit according to the use and care manual, ensuring you provide good ventilation when cooking with gas.

This appliance is not intended to be installed in or on recreational vehicles or boats.

**TESTED IN ACCORDANCE WITH ANSI Z21.58a-1998/CGA 1/6a-M98 STANDARD FOR OUTDOOR COOKING GAS APPLIANCES. THIS GRILL IS FOR OUTDOOR USE ONLY.** Check your local building codes for the proper method of installation. In the absence of local codes, this unit should be installed in accordance with the National Fuel Gas Code No. Z223.1 and the National Electrical Code ANSI/NFPA No. 70

### FOR YOUR SAFETY

**DO NOT** store or use gasoline or other flammable vapors and liquids in the vicinity of this grill.

### FOR YOUR SAFETY

**DO NOT** try lighting this grill without reading the "LIGHTING INSTRUCTIONS" section of this manual.

# INSTALLATION INSTRUCTIONS

## IMPORTANT SAFETY INFORMATION

Read this manual carefully before using your Grill to reduce the risk of fire, burn hazard or other injury.

Make sure that the Side Burner that you are about to install is set for the same gas (LP-Propane or Natural Gas) as your Jenn-Air Gas Grill. (This is essential for the unit to work correctly.)

Tools Required: Adjustable wrench, flat head screwdriver and a 1/4" socket wrench

## INSTALLATION-MAIN GRILL PREPARATION

\*Make sure the gas supply to your Grill is shut off before the installation of the Side Burner assembly.

Remove the right shelf of the Grill by removing the 2 hex head screws and pull up on shelf. (see grill owner's manual for picture of shelf assembly)

## INSTALLATION OF SIDE BURNER ASSEMBLY TO GRILL

1. With the right shelf removed it is easy to see the Hole in the cart to feed the flex line through (it has a cap on it.) (See Fig. 1)
2. Remove the Cap with a flat head screwdriver by pushing from the inside of the cart.
3. Attach the Side Burner to the grill by inserting the shelf hooks into the slots on the side of the grill and pushing down on the shelf assembly until level with the grill (See Fig. 2)
4. Lock the Side Burner in place by re-inserting (1) hex head screw in the front edge of side burner. (See Fig. 3)

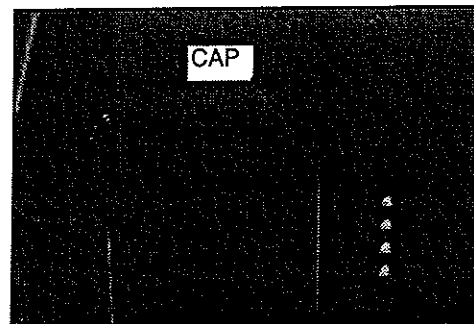


Fig. 1

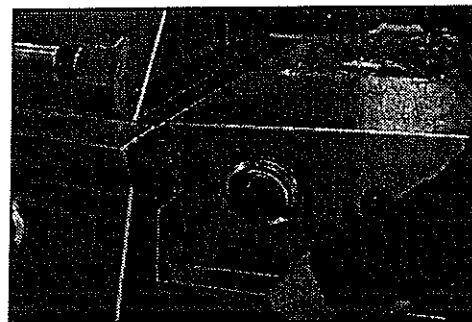


Fig. 2

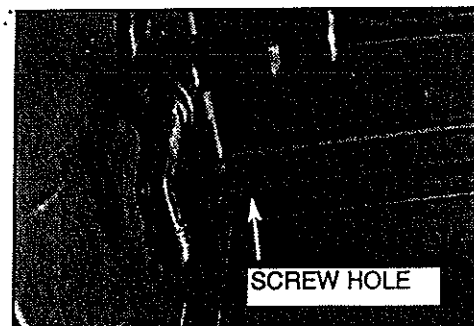


Fig. 3

# INSTALLATION INSTRUCTIONS

## LP Version

### Flare Fitting Attachment

You must change the main Flare Fitting on the bottom side of the grill to the "T" Flare Fitting supplied with the Side Burner.

1. Remove the gas hose assembly from the Flare Fitting. (this has the regulator attached to it.) (See Fig 4)
2. Using an adjustable wrench remove the Flare Fitting coming out of the bottom of the grill. (See Fig 5)
3. Once the Flare Fitting is removed the main pipe will be showing under grill (See Fig. 6)
4. Attach the "T" Flare Fitting to the main pipe coming out of the bottom of the grill using an adjustable wrench. (See Fig 7)
5. Attach the Flex Line to the fitting on the bottom of the Side Burner and then run the flex line through the hole into the cart. (See Fig 8)
6. Attach the gas hose assembly and the flex line to the "T" Flare Fitting. (See Fig 9)

**Be sure your L.P. cylinder has an overfill protection device on it. Max inlet pressure cannot exceed 10"-11" water column.**

LP hose/  
regulator  
supplied  
with grill.

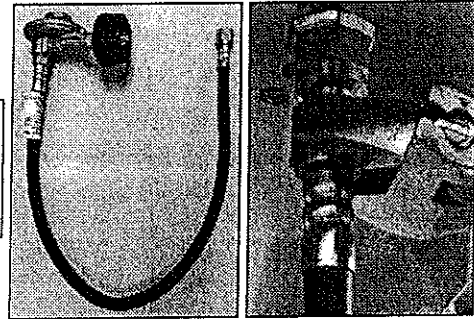


Fig. 4

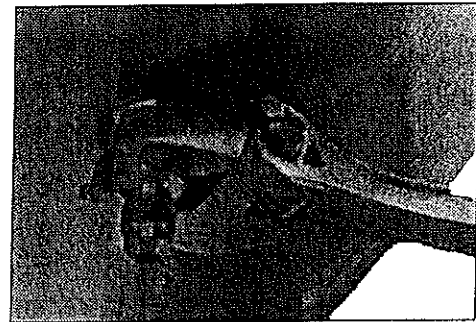


Fig. 5

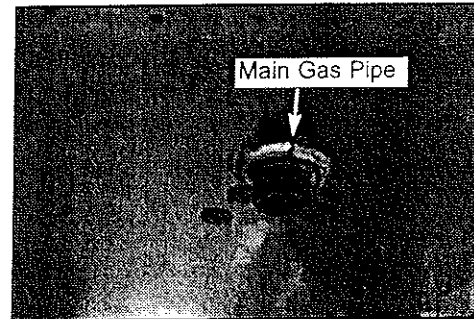


Fig. 6

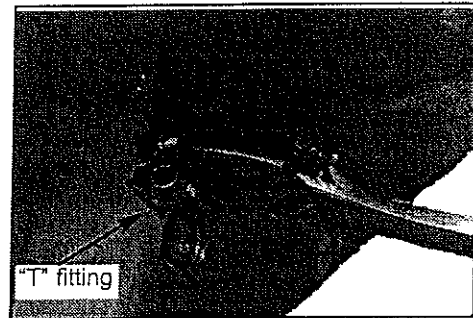


Fig. 7

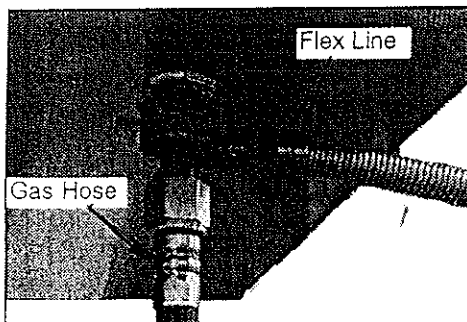


Fig.9

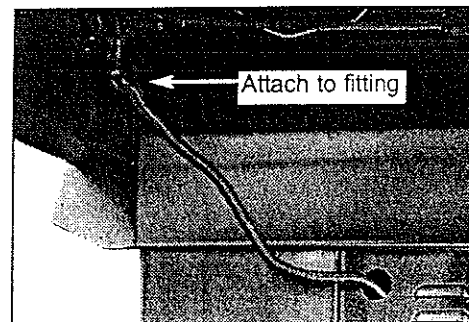


Fig. 8

# INSTALLATION INSTRUCTIONS

## SIDE BURNER PARTS ASSEMBLY

Remove the grate and yellow packet from top of side burner (See Fig. 10)

Remove the black circle from the yellow packet and place on top of burner. (See Fig. 11)

Install grate over burner (See Fig. 12)

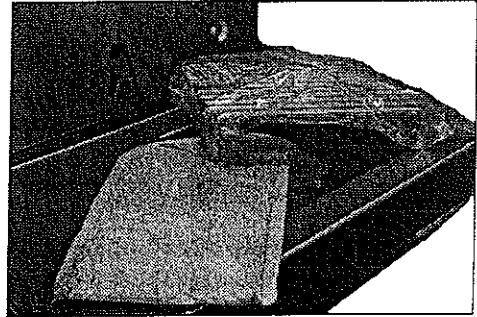


Fig. 10

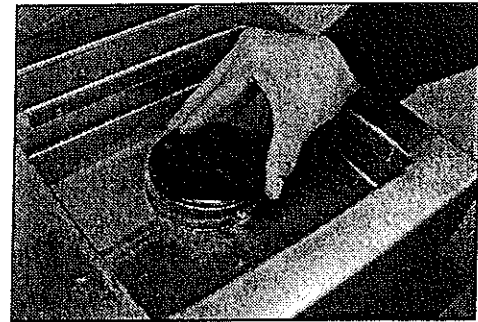


Fig. 11

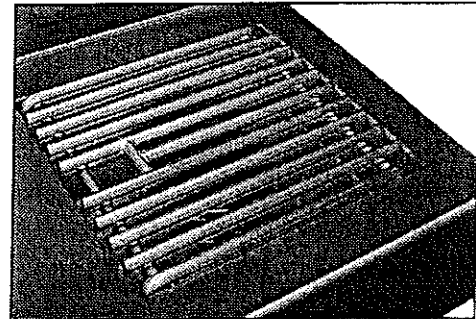


Fig. 12

## LEAK TESTING

Make sure all burners are turned to "OFF". Turn on the gas at the cylinder (LP models) or main valve (Natural models). DO NOT turn on the side burner. Perform a leak test at all connections and fittings by spraying a 50/50 solution of water and soap. If any bubbles appear, correct the leak before attempting to light the grill or side burner.

## LIGHTING INSTRUCTIONS

Push and turn the control knob to the "HIGH" position and immediately press and hold the electronic ignitor button. You'll hear a snapping sound. It may be necessary to hold the electronic starter button for about 4 seconds. If the burner does not light in 4 seconds, turn the knob to the "OFF" position and wait 5 minutes before trying again. Repeat above steps to light remaining burners. (See Fig. 13)

## Match Lighting

If by chance the electronic ignitor does not light the burner, the burner may be lit with a match. Keep your face as far away from the burner as possible and place a lit, long stem match through the spaces in the grate to the ports of the burner. Position the match near the burner ports and push and turn the control knob to the "HIGH" position.

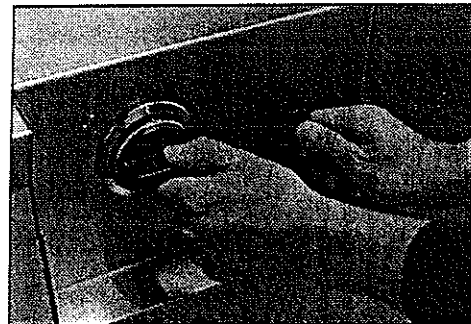


Fig. 13

# WARRANTY

## LIMITED LIFETIME WARRANTY

Jenn-Air Grills from Sure Heat, have a Lifetime Warranty on all stainless steel parts, 15 years on stainless burners and a 5 year warranty on all other parts.

**IMPORTANT:** We recommend you return the warranty registration card so that you can be contacted if any questions of safety arise that could affect you. The return of the warranty registration card is not a condition for warranty coverage.

### LIMITED WARRANTY

If the Jenn-Air Grill does not operate properly, first thoroughly carry out the instructions provided with the unit to ensure that the appliance is installed correctly and check the Troubleshooting section.

- The warranty is nontransferable.
- The warranty is for replacement or repair of defective parts only. Sure Heat will not be responsible for damage resulting from accident, alteration, misuse, abuse, hostile environments, improper installation or installation not in accordance with local codes.
- This limited warranty does not cover corrosion or discoloring due to lack of maintenance, misuse, hostile environments, alterations, accidents or abuse or neglect.
- This limited warranty does not cover any scratches, dents, corrosion or discoloring by heat, abrasive and chemical cleaners nor any components used in the installation of the appliance.

If you have other questions about your Jenn-Air Grill, please contact  
Sure Heat Customer Service Hotline  
(800) 229-5647

Because of continuing product improvement these specifications are subject to change without notice.

Jenn-Air is a registered Trademark of the Maytag Corporation and is used under license to the Lowe's Companies, Incorporated.

12 /2002